

## REMOTE CONTROL.

### POWER/STANDBY

Power selected device on/off

### TV INPUT

Change TV input device

### DEVICE CONTROL

Selects device to control

### OPTIONS

Provides options for TV or other input devices

### BACK

Back one level in menus

### EXIT

Exit menu

### VOL

Increase/decrease volume

### MUTE

Turns volume on/off

### NUMBER KEYS

Allows you to navigate to a specific channel number

### DOT KEY

For future use

### DVR

Displays DVR menu

### LIVE TV

Takes you to Live TV

### MEDIA

For future use

### SETUP

Set up remote for TV

### TRANSPORT KEYS

Controls video

REPLAY - back 8 seconds

SKIP - ahead 30 seconds

### REC

Starts/stops recording

### MENU

Display navigation menu

### INFO

Display information about program

### NAVIGATION

Arrow keys navigate menus, OK executes selected

### VOD

Displays On Demand menu

### GUIDE

Displays program guide

### SHORTCUTS

Actions vary, see on-screen prompts for directions

### CH/PG

Change channel, or page up/down within guide

### LAST

Change to previous channel



 
NEW HAMPTON  
MUNICIPAL UTILITIES

## QUICK START GUIDE.



## NAVIGATION MENU.

The Menu provides easy navigation to access popular features. Press **MENU** on your remote and use **Arrows** to navigate menu categories.

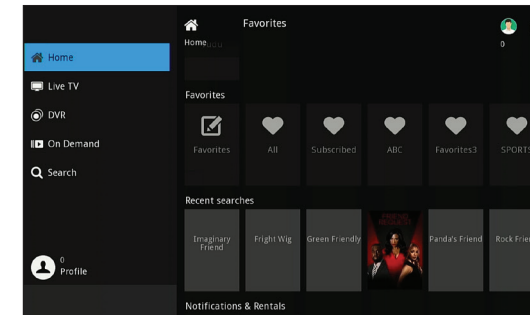

### +NAVIGATE THE MENU

- Arrow over using your **Right Arrow** to access a Menu category and navigate features in available category rows.
- Use **BACK** on your remote to move back to the previous screen within the Menu or **EXIT** to leave the Menu.

### MENU CATEGORIES

**+HOME MENU** Create lists of your Favorite networks, see results from your recent Searches, and view your scheduled Reminders.

**+LIVE TV MENU** Quickly scan what programs are live on your Favorite networks.

 
**+DVR MENU** Watch previously recorded programs or series and edit the schedule of items set to record.

**+ON DEMAND MENU** View content available from more than 30 networks for free or rent a new movie just out of the theater.

**+SEARCH MENU** Search all programs available on the Guide, On Demand menu and your DVR for a specific program title.

**+PROFILE** Edit Preferences, Users profiles and Hardware Settings.

### +FIND A SHOW OR MOVIE QUICKLY | SEARCH

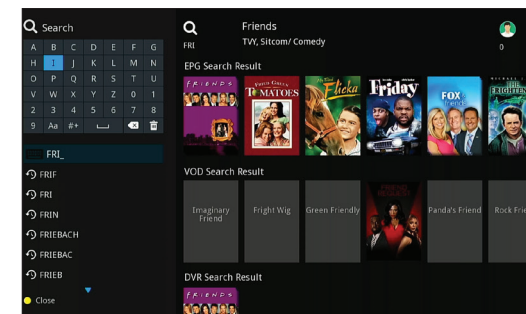

- Press the Yellow Triangle button marked **A** on your remote to access Search and to display an on-screen keyboard.
- Using **ARROWS** and **OK** to select, type the title of the program. Press **BACK** if you need to quickly delete a letter.
- Search results from your electronic program guide (EPG), On Demand (VOD) and DVR will populate in category rows.

## PROGRAM GUIDE.

The Guide is the best way to scan what programs are available on each channel at a given time. Press **GUIDE** on your remote control to access.



### +NAVIGATE THE GUIDE

Press the **Up** or **Down Arrows** to view what programs are available on each channel.

- Press the **Left** or **Right Arrows** to view up to 3 days of past and 12 days of future programming.
- Highlight a current program and press **OK** to preview. Press **OK** again to view the program full screen.
- Press **GUIDE** on your remote multiple times to switch the list of available channels to All, Subscribed (channels in your TV package) or any Favorites lists that you create.
- Press **EXIT** to leave the Guide.

### DETAILS SCREEN

The Details screen displays information about a specific program and what actions are available for that program.



### +ACCESS DETAILS SCREEN

- While in the Guide, use **Arrows** to highlight a program and press **INFO** on your remote.
- While watching a program press **OK** on your remote.



WWW.NHMu.COM

641-394-4550

OR EMAIL: INFO@NHMu.COM

112 E. MAIN ST  
NEW HAMPTON, IA 50659

**WATCH WHAT YOU WANT WHEN YOU WANT.** Record an unlimited number of networks and store up to 150 hours of HD programming for up to 6 months.

#### +RECORD A PROGRAM OR SERIES

**+RECORD THE REST OF A PROGRAM YOU ARE WATCHING**  
Press **REC** on your remote while watching live TV.

**+RECORD A FUTURE PROGRAM**  
While in the Guide, highlight a future program and press **REC** on your remote. The program listing should now have a red recording symbol.

 
**+RECORD A SERIES**  
While in the Guide, highlight a future episode of the series you'd like to record and press **OK** on your remote. You'll be taken to the Details screen. Select Record Series. A dialogue box will display. Edit your preferences and select OK.

#### +RECORDING TIP


- If you think a program may run past the allotted time, record the program immediately following in addition to your program to ensure you capture the end.

#### +EDIT SCHEDULED RECORDINGS

- Press **DVR** on your remote and use **Arrows** to navigate to your desired category row.
- To edit a program you set to record, navigate to the To Record category row and select the program. Once on the Detail screen you can cancel the recording or skip a specific episode in a series recording.
- To edit a series recording, navigate to the Series Recording category row and select the series. A dialog box will display and allow you to Edit your recording preferences.

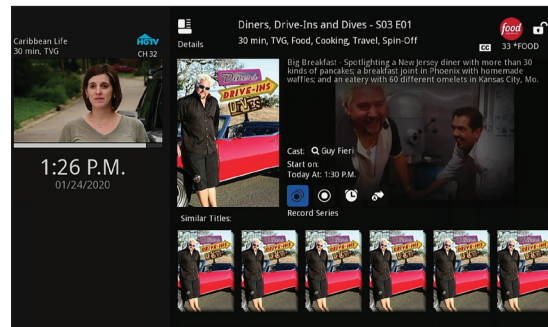

#### +WATCH A RECORDED PROGRAM OR SERIES

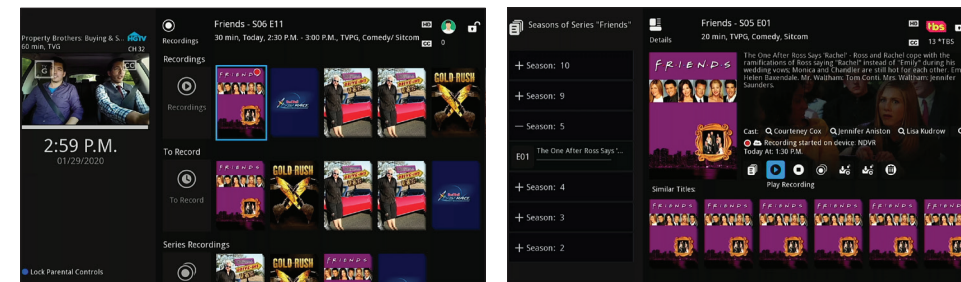 

- Press **DVR** on your remote to display the DVR menu.
- In the Recordings category row, use **Arrows** to navigate to the program or series you would like to view and press **OK**. You will be taken to the Details screen. Select Play Recording. Press **STOP** on your remote to exit the recording.

#### +POPULAR RECORDING ACTIONS

The actions available on the Details screen will vary depending if you have recorded a single program or multiple episodes of a series.

**+HIDE/SHOW EPISODES** Will be available when you have recorded multiple episodes of a series. When Episodes is visible, your series recordings will be sorted by episode number and season (*when applicable*) to allow you to easily navigate to the episode you would like to watch. (*Enter or exit seasons by using your Left and Right Arrow.*)

**+PLAY RECORDING** View the selected episode from the beginning.

**+RESUME PLAY** Will be available when you started watching an episode but have not completed it. Select to pick up where you left off.

**+DELETE RECORDINGS** Your delete recording options will vary depending on the number of episodes you have recorded. You will be able to delete a single episode, a season or a series.

#### +CONTROL PLAYBACK | FF REW SKIP REPLAY

- Control the playback of a recording or while using On Demand, Catch up or Restart: use **FF** or **REW** to move 4, 16, 32 or 64 seconds, **SKIP** to advance 30 seconds at a time, **REPLAY** to replay the previous 8 seconds. **Stop** will exit.

#### +NEVER MISS A PROGRAM | CATCH UP & RESTART

 
 
With catch up and restart you can restart a currently-airing program from the beginning and access up to 3 days of past programming so you never miss the beginning of your favorite show or last night's big game again. *Channels with catch up and restart will have an asterisk displayed in the Guide next to the network name.*

#### +CATCH UP ON PAST PROGRAMMING

- Navigate to past programming in the Guide by using the **Arrow** keys on your remote. Or press **REPLAY** to jump back 12 hours at a time.
- When you find the program you would like to watch press **OK** to display the Details screen. Select Play From Start to begin the program.

#### +RESTART LIVE TV


- Navigate to the current program you want to watch in the Guide by using the **Arrow** keys on your remote.
- Press the **PLAY** button on your remote to restart the program.
- If you are watching a live program you'd like to restart, press **OK** on your remote to be taken to the Details screen. Select Restart TV.

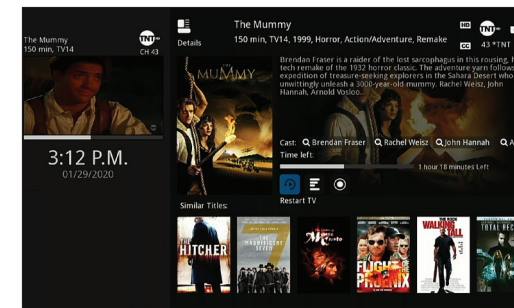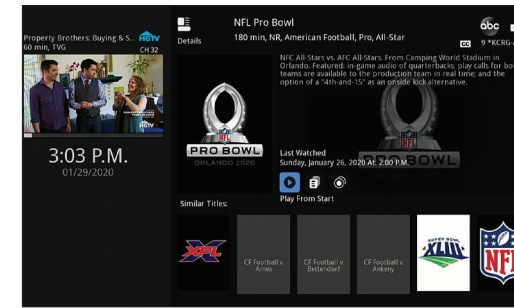

#### +DISCOVER A NEW SERIES OR MOVIE | ON DEMAND

Binge a new series or watch a movie anytime you want with On Demand. View thousands of hours of movies or current series episodes from top TV networks. Or rent a new movie just out of the theater.

 - Press **VOD** to display the On Demand menu.
- Use **ARROWS** to scroll through the available On Demand category rows.
- When you find the program you would like to watch press **OK** to display the Details screen. Select Play From Start to begin the program.
- To access On Demand filters, select the All Titles icon in the All Titles category row. Arrow over to the filters by using the **LEFT ARROW**.
- Enter or exit specific filters by using the **LEFT** and **RIGHT ARROWS**. Select filters by pressing **OK**.

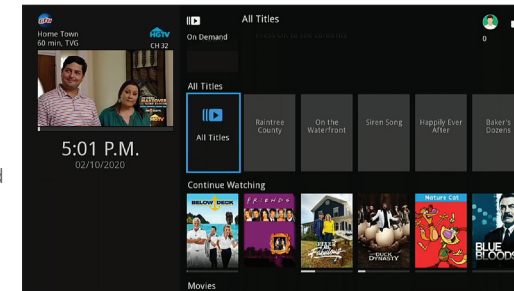

#### +LOCK CONTENT | PARENTAL CONTROLS

##### +CHOOSE PARENTAL CONTROL SETTINGS

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Users icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. (Your default PIN is "0")
- Use your **Down Arrow** and **OK** to select Parental Control.
- Here you will select the content that will be locked once Parental Controls are activated. Use **Arrows** to highlight filter and OK to change filter settings. Use **Left** and **Right Arrows** to change maximum Rating allowed and Unlock Timeout.
- Select Submit to save your settings.

##### +ACTIVATE PARENTAL CONTROL

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Preferences icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. (Your default PIN is "0")
- Use **Arrows** to navigate to Parental Control setting and select.
- Select Submit to save your settings.
- Blocked content will appear as Restricted in the Guide. View blocked content by entering your PIN.

##### +DEACTIVATE PARENTAL CONTROL

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Preferences icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. (Your default PIN is "0")
- Use Arrows to navigate to Parental Control setting and select to remove the check mark.
- Select Submit to save your settings and allow all content.

##### +LOCK RENTALS

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Users icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. (Your default PIN is "0")
- Use **Arrows** and **OK** to select Edit.
- Use **Arrows** to navigate to PIN. Using the **Numbers** keypad on your remote enter your PIN.
- Use **Arrows** and **OK** to select Enable PIN for Purchase.
- Select Submit to save your settings. You will need to enter your PIN to purchase rentals.